



OLIVER BONAS

AROMA DIFFUSER

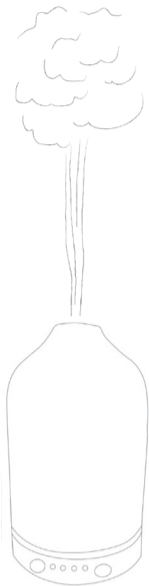

USE & CARE INFORMATION

COMPONENTS

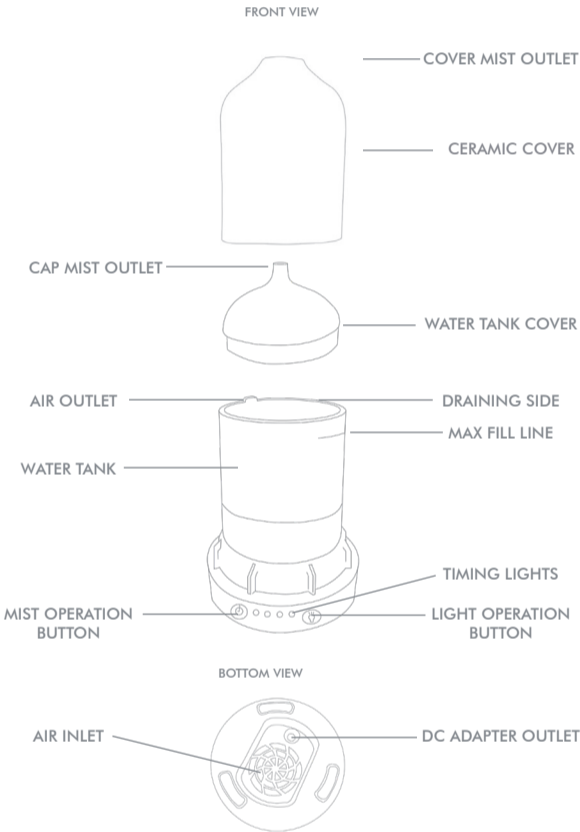

CARE INFORMATION

- We hope you love your purchase, however if you aren't completely happy please retain your packaging to ensure its safe return.
- Read all instructions before use
- For indoor use only
- Not for use in bathrooms or humid environments
- For adult use only, keep out of reach of children and pets
- Only use with the 24V DC adapter supplied
- Do not use if the cable is in any way damaged
- Do not attempt to open the electrical component
- Only for use with diluted fragrance oil
- Do not use when the water tank is empty
- Place on a level, protective surface
- Do not block the air inlet underneath
- Keep away from painted, polished and flammable materials
- Fragrance oils may stain or mark surfaces
- Wipe away any residue oil
- Fragrance oils are flammable, do not light and keep away from open flames
- Do not pour water into or close to the air outlet
- Make sure to unplug from the mains when refilling
- Do not cover the mist outlet
- Do not move the diffuser when in use
- Lovingly hand made, variations may occur.
- Retain this information for reference.

Oliver Bonas
Unit F, Davis Road Industrial Park
Chessington KT9 1TQ

Oliver Bonas Ireland Ltd
The Black Church St Mary's Place
Dublin 7 Republic of Ireland



INSTRUCTIONS

Step 1: Place diffuser on a flat surface and remove ceramic cover and cap.



Step 2. Turn upside down to connect DC adapter into diffuser.

Do not plug into mains until fully filled and assembled in case of any spillages.



Step 3. Turn back upright, placing on a flat and level surface. Fill a measuring cup with 90-100ml of water and add to water tank. Make sure not to exceed the max fill line. Add with 2-3 drops of fragrance oil.



Step 4: Replace cap and ceramic cover. Make sure both the cover and cap air outlet are aligned. Plug adapter into mains.



CLEANING

Always unplug the diffuser before cleaning.

When emptying any excess water, ensure that poured from the draining side, as marked on the water tank.

Empty the tank and refill every third day. Before refilling, clean it with fresh tap water. Remove any scale, deposits, or film that has formed on the sides of the tank or on interior surfaces, and wipe all surfaces dry.

OPERATIONS



MIST BUTTON

PRESS ONCE
Power on, mister will operate for 30 minutes

PRESS TWICE
Mister will operate for 1 hour

PRESS THREE TIMES
Mister will operate for 2 hours

PRESS FOUR TIMES
Mister will operate for 3 hours

PRESS FIVE TIMES
Mister will power off

LIGHT BUTTON

Press once for white light

Press twice for red light

Press three times for blue light

Press four times for green light

Press five times for purple light

Press six times for yellow light

Press seven times for blue light

Press eight times for white light

Press nine times for light off

How to Look After Your Aroma Diffuser

We hope you love your aroma diffuser.

On the off chance that problems arise, here are some potential causes and their simple solutions

| Problem | Potential cause | Solution |
|---|--|--|
| Little or no mist output. | Insufficient or too much water in the water tank. | Add more water to the water tank. Ensure that the water level does not exceed the maximum fill line. |
| | Build-up of oil on the ultrasonic plate inside the water tank. | Empty the contents and clean inside with a soft, dry, and clean cloth. |
| | The air inlet at the base of the diffuser is blocked. | Remove any items that the diffuser is placed on as these might be blocking the air inlet. Carefully wipe the air inlet with a soft dry cloth to remove any dust. |
| | The ceramic outer lid and water tank lid are not aligned. | Ensure that the inner and outer lids are aligned, so that the mist can diffuse effectively through the holes. |
| It turns off immediately after being switched on. | Insufficient water in the tank. | The diffuser will automatically turn off if there is not enough water in the water tank. Fill the water tank, making sure not to exceed the maximum fill level. |
| | The power supply is not connected properly. | Check that the adapter is securely plugged into the power outlet and base of the diffuser. |
| Lights are flashing or flickering. | Water inside the circuit board. | Turn off the diffuser, then clean it and leave it to dry for 24 hours. |
| The buttons have stopped functioning. | | |

Please contact the Oliver Bonas customer service team for further assistance if required.

Please retain this information for future reference.