

# OLIVER BONAS

## DISCO DESK & TABLE LAMP LIGHTING CARE GUIDE

We hope you love your purchase, however if you aren't completely happy please retain your packaging to ensure its safe return.

If the external flexible cable or cord of this luminaire is damaged, it should be exclusively replaced by the manufacturer or a similar qualified person in order to avoid a hazard.

Each luminaire is lovingly hand finished, variances may occur.

### IMPORTANT INSTRUCTIONS

The bulb 40W E27/ES is not included.

Please refrain from moving the lamp by the cord.

Before replacing the bulb, please ensure it has been unplugged from the mains.

Always wait for the bulb to cool before removing.

### WARNING!

Not suitable for children's rooms.

Not suitable for bathrooms.

Not suitable for outdoor use.

If the electrical cord is damaged, please do not use.

Do not exceed the maximum wattage: 40W

### CLEANING

Take care of your piece by wiping with a soft dry cloth, avoid using abrasive cleaners and water.

### CONSIDER THE ENVIRONMENT

We recommend using our 6W LED bulb.

Please remember to turn your light off at the mains when not in use to save energy.

Please retain this information for future reference.