


OLIVER BONAS

AURÉLIE CHEST OF DRAWERS

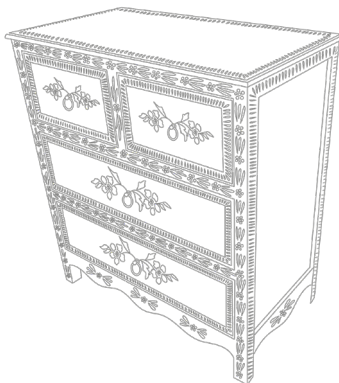

We hope you love your purchase, however if you aren't completely happy,
please retain your packaging to ensure its safe return

AURÉLIE FURNITURE RANGE

Each Aurélie piece has been lovingly handmade and hand painted by artisans in Jodhpur, India
Due to this, each piece is unique and variations in colour and finish may occur

MANGO WOOD & MDF

The framework is made from mango wood. This is local grown and harvested in India
All panels are made from MDF

FEATURES

Each leg has been fitted with levellers, simply rotate to get the perfect level
The handles are made from brass and will naturally discolour over time

CARING FOR YOUR FURNITURE

To keep your furniture happy, make sure you keep it dry
Do not place in front of a radiator or in sunlight and avoid direct heat
Similarly, do not place it outdoors or in any moist environments

Take care when moving your furniture, do not drag as this may weaken the joints, levellers and construction

Max weight 5kg top drawers
10kg middle and bottom drawers
Ensure weight is evenly distributed

Keep away from fire
Be sure to use a coaster for your cup of tea
Not suitable for children's rooms
Domestic use only

CLEANING

Wipe with a damp cloth, followed by a soft dry cloth
Any spills should be wiped dry immediately to avoid discolouration and staining


Avoid abrasive cleaners
Retain this information for reference

Oliver Bonas
Unit F, Davis Road Industrial Park
Chessington KT9 1TQ




Oliver Bonas Ireland Ltd
The Black Church St Mary's Place
Dublin 7 Republic of Ireland

OLIVER BONAS


ANTI-TIP KIT

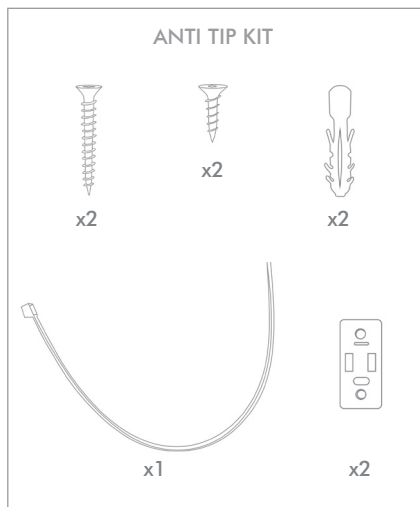


Please use the anti tip kit provided for safety. Please ensure the correct fittings are used for the chosen wall substrate:

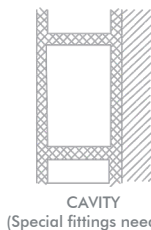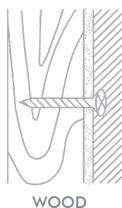


ASSEMBLY

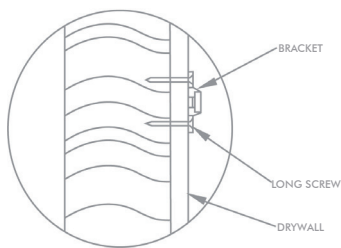

1. Mark the location of the hole on the wall using bracket approx 1" below the top of furniture. Predrill the holes at marked location & insert wall plug. Align bracket onto wall plug & secure using long screws.

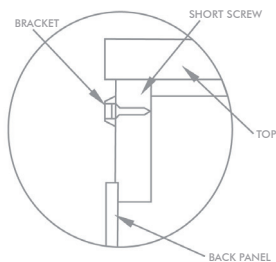

2. Move the furniture to its final position against the wall and mark the location of the wall bracket on the back of the furniture. The bracket that attaches to the furniture must go into the solid wood piece at the top, not into the thinner back panel. Move the furniture away from the wall and place a bracket on the mark. Mark and drill holes for the screws using a 3/32 drill bit. Attach the bracket to the furniture using the short screws.

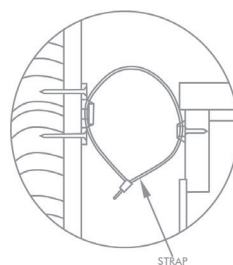

3. Move the furniture to its final position and align the bracket on the furniture with the bracket on the wall. Thread the strap through the bracket as shown, and tighten until snug. Do not over-tighten.

IMPORTANT

Check that the wall bracket is firmly screwed into the stud, the furniture bracket is firmly attached to the frame, and the strap is snug.