

# OLIVER BONAS

## CASA CHEST OF DRAWERS



### CASA CHEST OF DRAWERS

We hope you love your purchase, however if you aren't completely happy please retain your packaging to ensure its safe return

### MANGO WOOD

Mango wood is a hardwood timber. Mango wood is coarse in texture and its colour varies from light to dark brown. Natural variation may occur adding charm to each piece.

### CARING FOR YOUR FURNITURE

To help maintain the natural beauty and performance of your piece of furniture do not position in front of radiators, avoid direct heat, direct sunlight, moist environments and outdoor use.

Any spills should be removed immediately, never let them dry out on the surface  
Always use a coaster or mat to protect the surface.

Take care when moving the furniture, do not drag furniture as it may cause damage to the joints.

Max load on top of unit 20kg, max load per drawers 8kg.

Take care not to overload and ensure weight is evenly distributed.

Wipe with a damp cloth followed by a soft dry cloth.


Do not use abrasive cleaners or furniture polish as this may cause discolouration.

Not suitable for outdoor use  
Not suitable for children's rooms  
Do no sit or stand on the furniture  
Designed for domestic use only




Retain this information for future reference

# OLIVER BONAS


## ANTI-TIP KIT

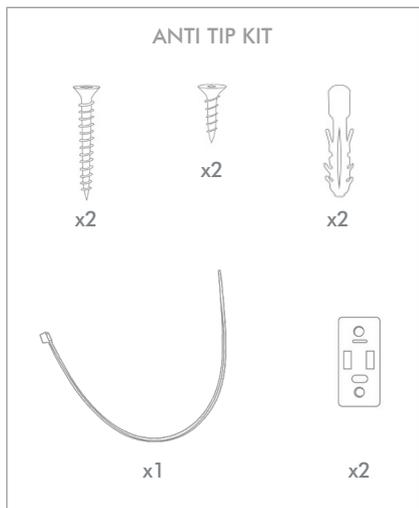


Please use the anti tip kit provided for safety. Please ensure the correct fittings are used for the chosen wall substrate:

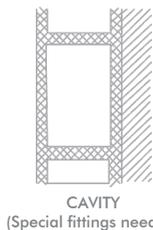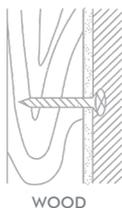


### ASSEMBLY

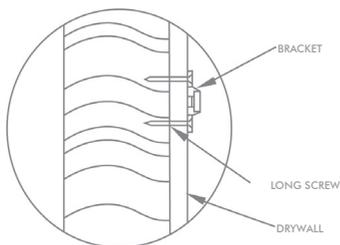

1. Mark the location of the hole on the wall using bracket approx 1" below the top of furniture. Pre-drill the holes at marked location & insert wall plug & secure using long screws.

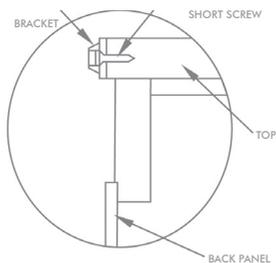

2. Move the furniture to its final position against the wall and mark the location of the wall bracket on the back of the furniture. The bracket that attaches to the furniture must go into the solid wood piece at the top, not into the thinner back panel. Move the furniture away from the wall and place a bracket on the mark. Mark and drill holes for the screws using a 3/32 drill bit. Attach the bracket to the furniture using the short screws.

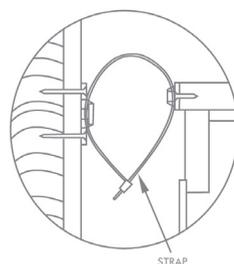

3. Move the furniture to its final position and align the bracket on the furniture with the bracket on the wall. Thread the strap through the bracket as shown, and tighten until snug. Do not over-tighten.

### IMPORTANT

Check that the wall bracket is firmly screwed into the stud, the furniture bracket is firmly attached to the frame, and the strap is snug.