


OLIVER BONAS

FAHRA METAL SIDEBOARD

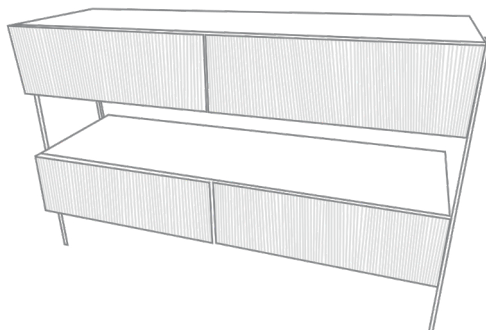

We hope you love your purchase, however if you aren't completely happy please retain your packaging to ensure its safe return

White oak veneer with laser etched steel drawers.
Each piece has been lovingly handmade by skilled craftspeople.

Each leg has been fitted with an adjustable leveller to ensure you can get the perfect balance on your floor.

CARING FOR YOUR FURNITURE

To help maintain the natural beauty and performance of your piece of furniture do not position in front of radiators, avoid direct heat, direct sunlight, moist environments and outdoor use.

Any spills should be removed immediately, never let them dry out on the surface.

Always use a coaster or mat to protect the surface.

Do not use harsh abrasives or household cleaners as they may damage the finish.

Take care when moving the furniture, do not drag furniture as it may cause damage to the joints.

Max load on top of unit 40kg, max load per drawers 4kg.

Take care not to overload and ensure weight is evenly distributed.

Do not lean, sit or stand on the sideboard.

Wipe with a damp cloth followed by a soft dry cloth.

Do not use abrasive cleaners or furniture polish.

Designed for domestic use only.

Not suitable for outdoor use.

Not suitable for children's rooms.

Do not sit or stand on the furniture.


Retain this information for future reference.

Oliver Bonas
Unit F, Davis Road Industrial Park
Chessington KT9 1TQ




Oliver Bonas Ireland Ltd
The Black Church, St Mary's Place,
Dublin, D07 P4AX, Ireland

OLIVER BONAS




ANTI-TIP KIT

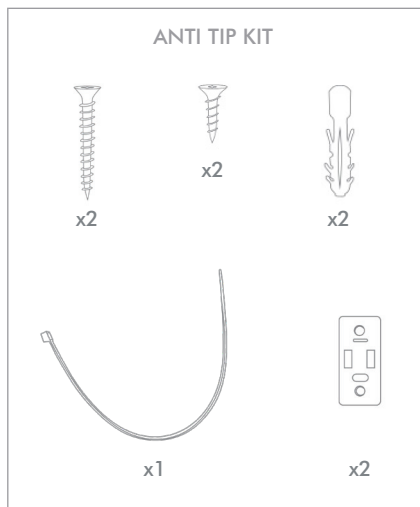

Please use the anti tip kit provided for safety. Please ensure the correct fittings are used for the chosen wall substrate:

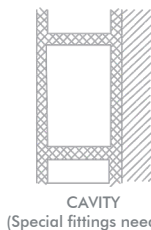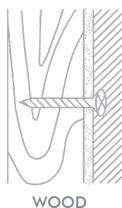

ASSEMBLY

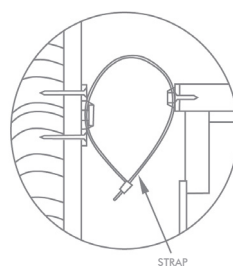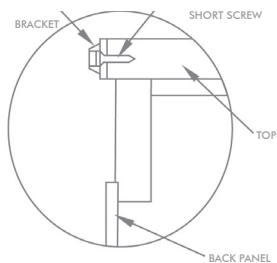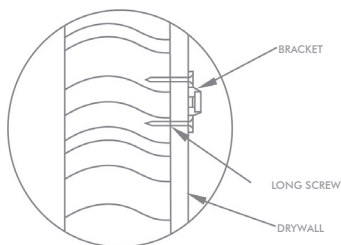

1. Mark the location of the hole on the wall using bracket approx 1" below the top of furniture. Predrill the holes at marked location & insert wall plug. Align bracket onto wall plug & secure using long screws.

2. Move the furniture to its final position against the wall and mark the location of the wall bracket on the back of the furniture. The bracket that attaches to the furniture must go into the solid wood piece at the top, not into the thinner back panel. Move the furniture away from the wall and place a bracket on the mark. Mark and drill holes for the screws using a 3/32 drill bit. Attach the bracket to the furniture using the short screws.

3. Move the furniture to its final position and align the bracket on the furniture with the bracket on the wall. Thread the strap through the bracket as shown, and tighten until snug. Do not over-tighten.

IMPORTANT

Check that the wall bracket is firmly screwed into the stud, the furniture bracket is firmly attached to the frame, and the strap is snug.