


# OLIVER BONAS

## KINSHIP CHEST OF DRAWERS

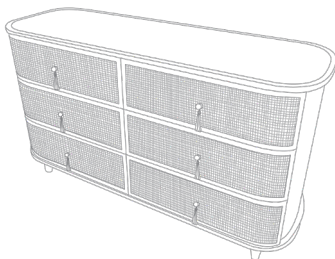

### KINSHIP CHEST OF DRAWERS

We hope you love your purchase, however if you aren't completely happy, please retain your packaging to ensure its safe return

Each piece has been lovingly handmade by skilled craftspeople

### MINDI WOOD & RATTAN, WITH METAL INLAY TOP

Mindi wood is a hardwood timber. It is coarse in texture and its colour varies from light to dark brown. Natural variation may occur due to the above qualities

Rattan is a natural material that has been grown and harvested in Indonesia. Variations may occur due to its natural qualities

### FEATURES

Each leg has been fitted with an adjustable leveller to ensure you can get the perfect balance on your floor

### CARING FOR YOUR FURNITURE

Maximum load per drawer 10kg

Do not overload and ensure weight is evenly distributed

During warm, humid weather wood can expand. During dry weather wood can contract. These seasonal variations are a normal characteristic of wood

To keep your new furniture happy, make sure you keep it dry

Do not position in front of radiators or in sunlight and avoid direct heat

Similarly, do not place in moist environments or outside

Be sure to use a coaster for your cup of tea

Take care when moving the furniture. Do not drag furniture as it may cause damage to the joints

### CLEANING

Wipe with a damp cloth, followed by a dry cloth. Any spills should be wiped dry immediately

Avoid abrasive cleaners

Designed for domestic use only


Please retain this information for future reference

Oliver Bonas  
Unit F, Davis Road Industrial Park  
Chessington KT9 1TQ




Oliver Bonas Ireland Ltd  
The Black Church St Mary's Place  
Dublin 7 Republic of Ireland

# OLIVER BONAS




## ANTI-TIP KIT

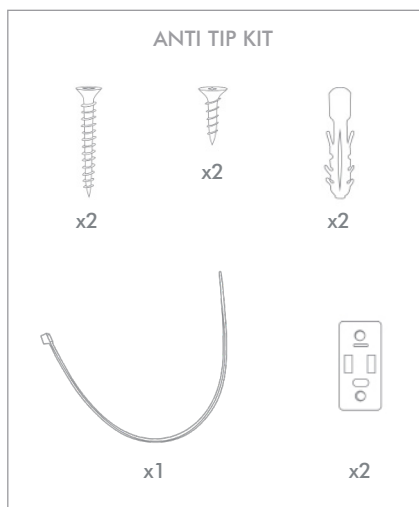

Please use the anti tip kit provided for safety. Please ensure the correct fittings are used for the chosen wall substrate:

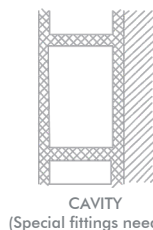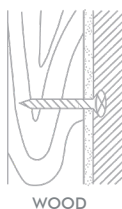

### ASSEMBLY

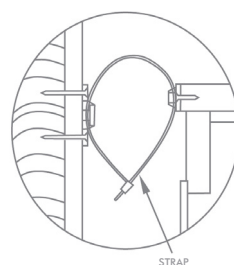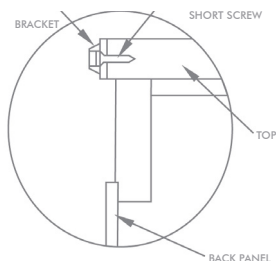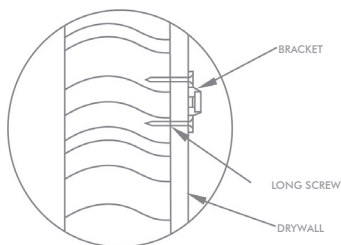

1. Mark the location of the hole on the wall using bracket approx 1" below the top of furniture. Predrill the holes at marked location & insert wall plug. Align bracket onto wall plug & secure using long screws.

2. Move the furniture to its final position against the wall and mark the location of the wall bracket on the back of the furniture. The bracket that attaches to the furniture must go into the solid wood piece at the top, not into the thinner back panel. Move the furniture away from the wall and place a bracket on the mark. Mark and drill holes for the screws using a 3/32 drill bit. Attach the bracket to the furniture using the short screws.

3. Move the furniture to its final position and align the bracket on the furniture with the bracket on the wall. Thread the strap through the bracket as shown, and tighten until snug. Do not over-tighten.

### IMPORTANT

Check that the wall bracket is firmly screwed into the stud, the furniture bracket is firmly attached to the frame, and the strap is snug.